


## A180 High Definition TV Card - Installation Guide

Before you install the A180 card in your system, download the driver from <http://www.aver.com>. Unzip the files to a temporary directory, such as c:\Avermedia\A180. Shut down your computer. Locate a free PCI slot on your motherboard and insert the A180 card. Connect your antenna feed to the RF connector on the back of the A180 card. Restart the computer. Windows Media Center Edition will detect the new card and start the driver installation process.



On the Found New Hardware Wizard page, select “Install from a list or specific location (Advanced)” and click on the Next button.

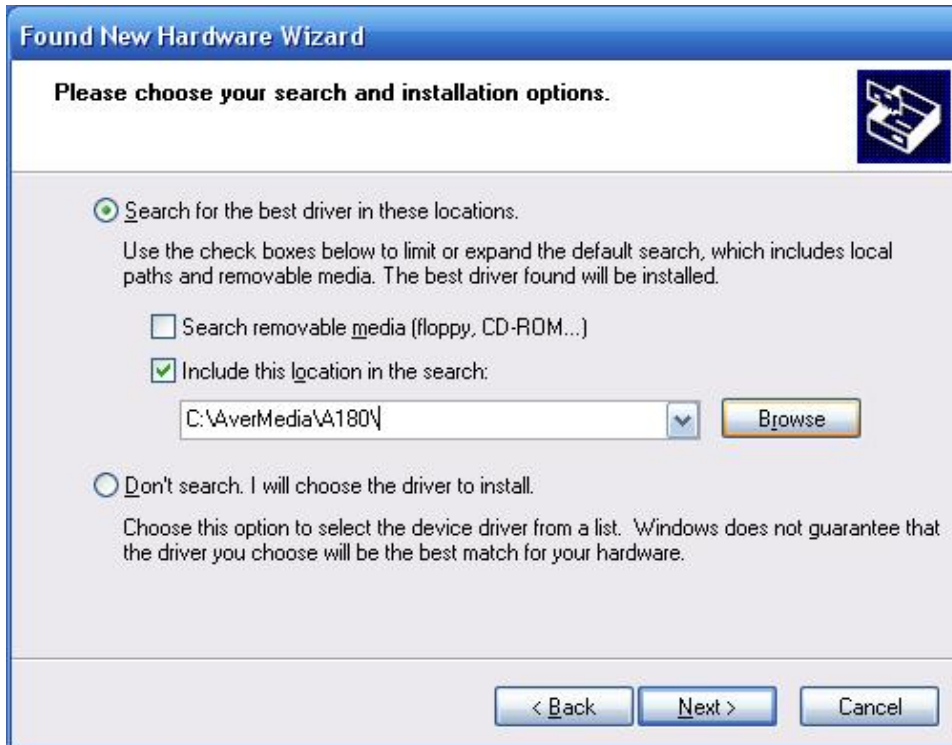

On the Search page, select “Include this location in the search:” and enter the location for the unzipped downloaded drivers. Click on Next. Windows will install the drivers.



Click on the “Finished” button to complete the installation. Refer to the A180 MCE Setup guide to setup High Definition support under Media Center.